



## Mechanism Instructions - B21

# Seating Inc.

P.O. Box 898 ♦ 60 State Street ♦ Nunda, NY 14517 ♦ Tel: 800•468•2475 ♦ seatinginc.com

**Tilt Resistance** - Turn the Hand Wheel counter clockwise to increase the tension for heavier people, clockwise to decrease the tension for lighter people.



**B21**  
**Basic Swivel Tilt**

### Tilt Adjustment

To engage upright tilt lock push lever in towards the mechanism. To disengage, pull the lever out away from the mechanism.

### Pneumatic Lift Adjustment

Rotate backwards and push downwards to adjust height.