



Mechanism Instructions - E21

Seating Inc.

P.O. Box 898 ♦ 60 State Street ♦ Nunda, NY 14517 ♦ Tel: 800•468•2475 ♦ seatinginc.com

Tilt Resistance - Turn the Hand Wheel counter clockwise to increase the tension for heavier people, clockwise to decrease the tension for lighter people.



**E21
Basic Swivel Tilt**

Tilt Adjustment

To engage upright tilt lock push lever in towards the mechanism. To disengage, pull the lever out away from the mechanism.

Pneumatic Lift Adjustment

Rotate backwards and push downwards to adjust height.