



Mechanism Instructions - E27

Seating Inc.

P.O. Box 898 ♦ 60 State Street ♦ Nunda, NY 14517 ♦ Tel: 800•468•2475 ♦ seatinginc.com



Tilt Adjustment

Pull tab up to allow for free floating positions. To lock in to desired tilting position push the tab down.

Pneumatic Lift Adjustment

Lift tab up to adjust seat height

Tilt Resistance - Hand wheel under front of mechanism - can't be seen in this picture. Instructions identical to E21 & E31 on left.

E27 Multi Locking Tilter