

Mechanism Instructions - HRA


Seating Inc.

P.O. Box 898 ♦ 60 State Street ♦ Nunda, NY 14517 ♦ Tel: 800•468•2475 ♦ seatinginc.com

Head Rest - Adjustable (HRA)

Angle Adjustments

Turn hand wheel counter clockwise to release head pad & head rest angle bar. After adjusting angles turn the knob clockwise to tighten the tension and hold the head rest pad & bar in place.

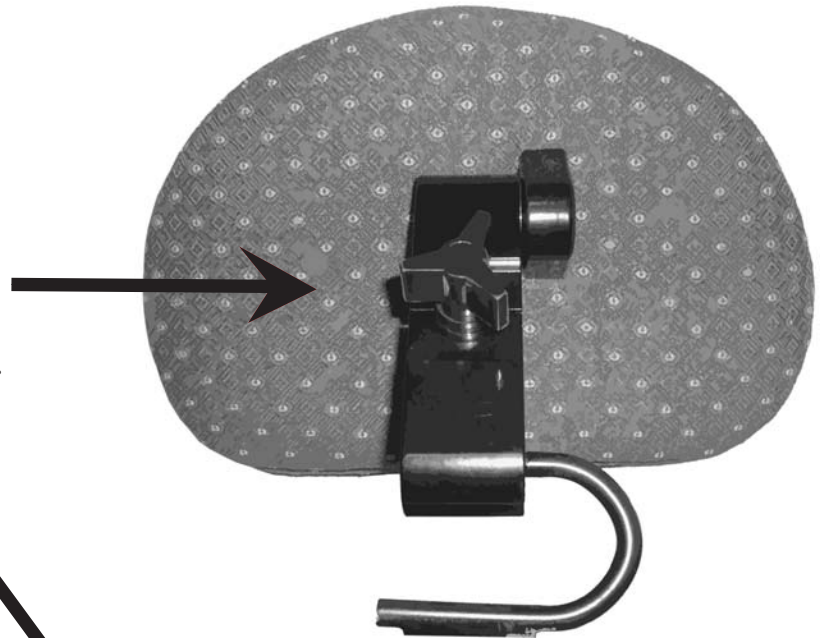

Quick Set Height Adjustment

The head rest height adjustment is hidden in the chair back. Operation is identical to the chair back height adjustment. Pull all the way up to release quick set, then let it drop down to lowest position. To activate, slowly lift to desired height.

