




# Q22 ASD Mechanism Instructions

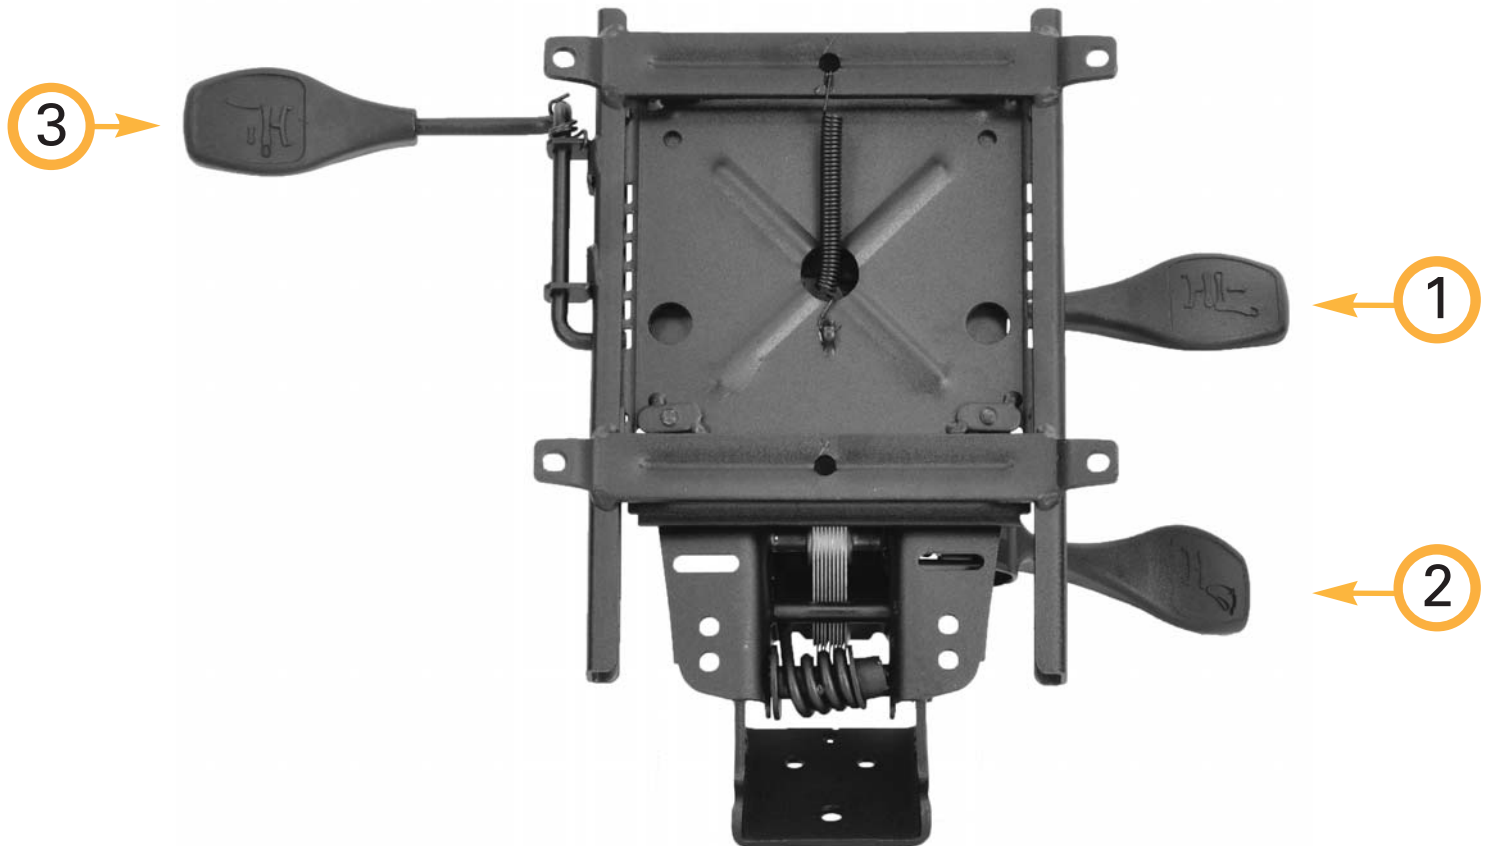

- ① **Pneumatic Lift Adjustment:**  
Lift lever towards seat to activate height adjustment.
- ② **Back Rest Angle Adjustment:**  
Pull up on lever to make adjustment to back rest angle.  
To lock the back rest in place, press the lever down.
- ③ **Adjustable Seat Depth:**  
Lift lever up to allow for adjustment of seat forward & back. Release lever to lock seat in desired position.

All adjustments are made while seated.