




Q32 Mechanism Instructions

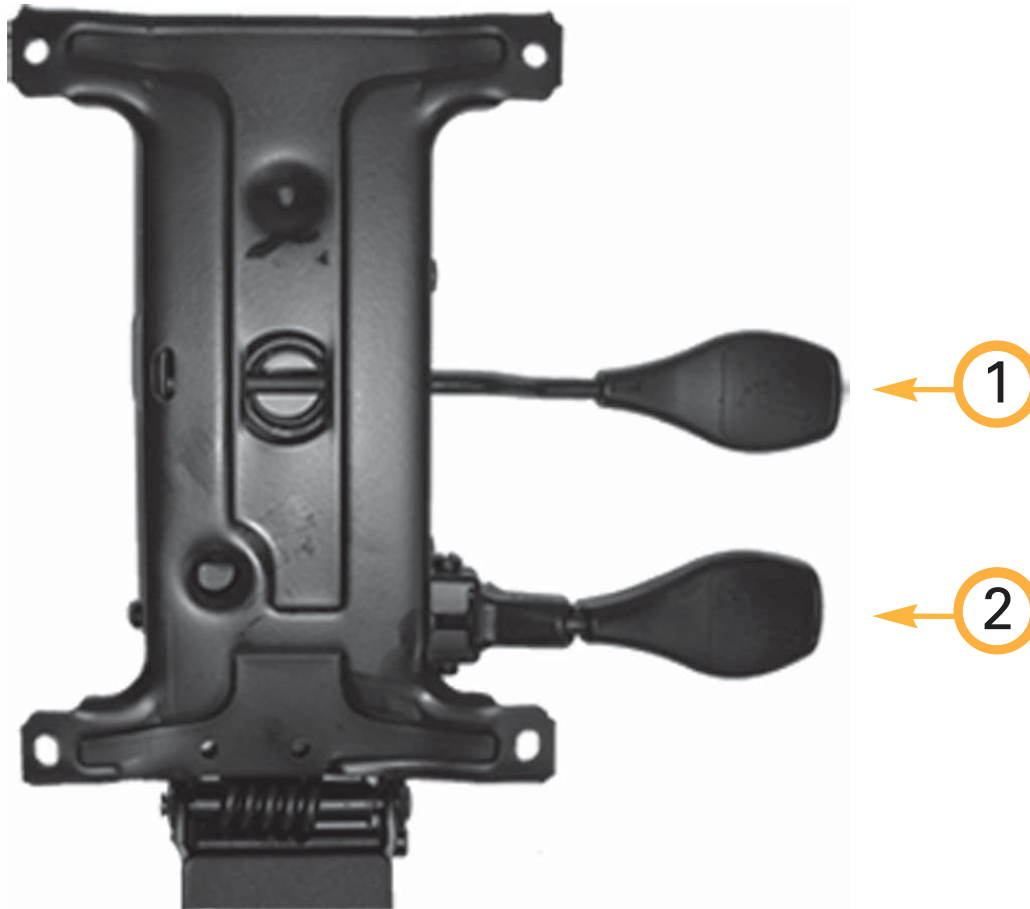

- ① **Pneumatic Lift Adjustment:**
Lift lever towards seat to activate height adjustment.
- ② **Back Rest Angle Adjustment:**
Pull up on lever to make adjustment to back rest angle.
To lock the back rest in place, press the lever down

All adjustments are made while seated.