



Seating Inc. | 60 N. State Street | PO Box 898 | Nunda, NY 14517 | 800.468.2475 | sales@seatinginc.com

# Q35 ASD BAA Mechanism Instructions



- ① **Adjustable Seat Depth (OPTIONAL):**  
Lift tab up to allow for adjustment of seat forward & back. To lock seat in desired position, push tab back down.
- ② **Tilt Lock Adjustment:**  
Turn Forward (Clockwise) to release lock and tilt freely.  
Turn Rearward (Counter Clockwise) to lock tilt position.
- ③ **Pneumatic Lift Adjustment:**  
Lift tab up to adjust seat height
- ④ **Tension Adjustment:**  
Pull the handle out away from the seat, then turn the handle forward to tighten, or rearward to loosen.
- ⑤ **Back Angle Adjustment (OPTIONAL)**  
Turn lever toward front of chair to change back angle to a closed back angle. Turn lever toward back of chair to change back angle to a more open position.

All adjustments are made while seated.