




# Q32 ASD Mechanism Instructions

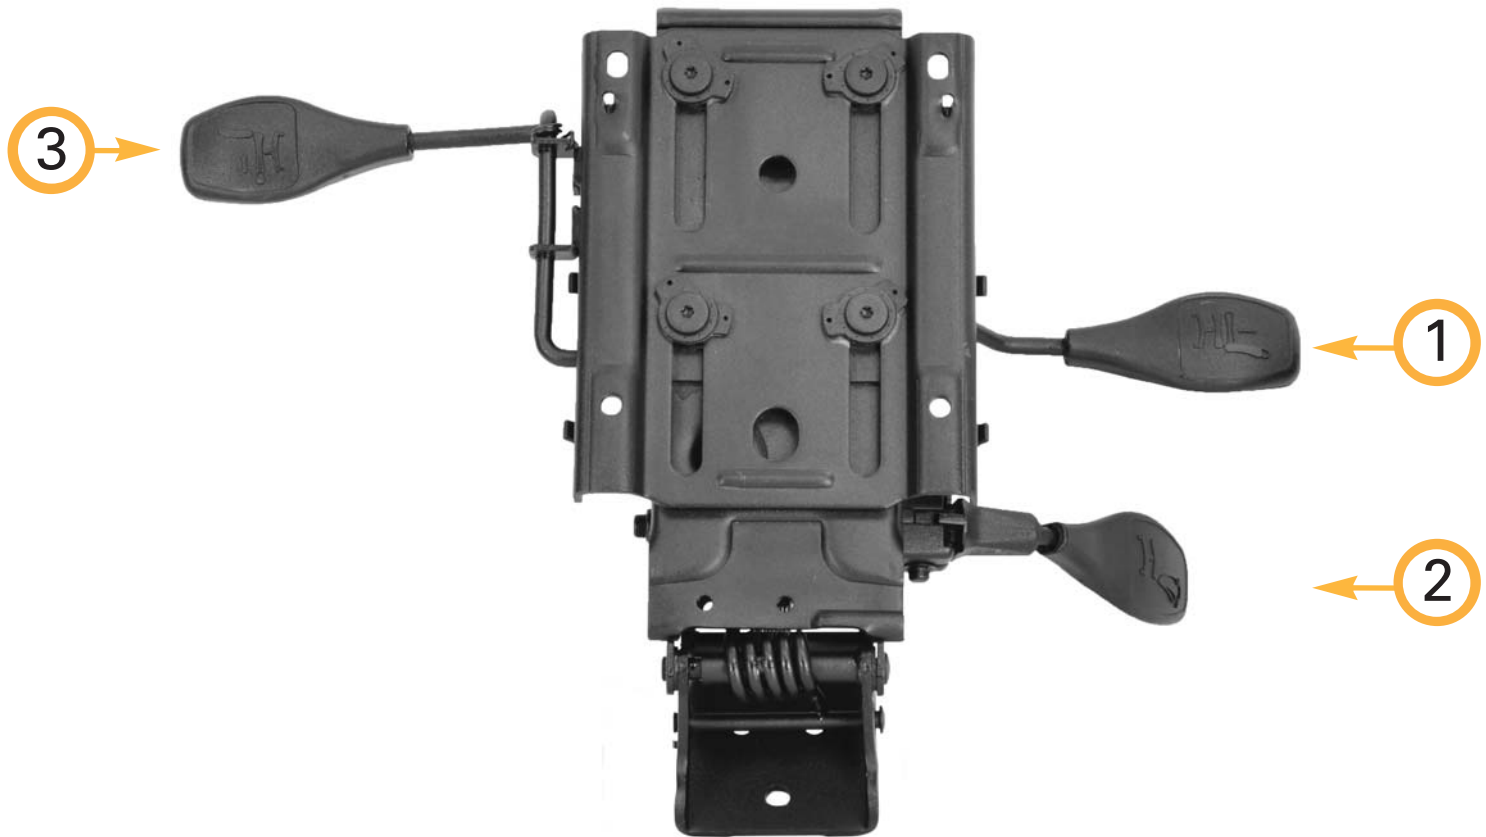

- ① **Pneumatic Lift Adjustment:**  
Lift lever towards seat to activate height adjustment.
- ② **Back Rest Angle Adjustment:**  
Pull up on lever to make adjustment to back rest angle.  
To lock the back rest in place, press the lever down.
- ③ **Adjustable Seat Depth:**  
Lift lever up to allow for adjustment of seat forward & back. Release lever to lock seat in desired position.


All adjustments are made while seated.



# Q32 Assembly Instructions


## Step 1

- ① Place Base and Caster Assembly (Figure A) on carpeted floor.
- ② Insert Pneumatic Cylinder (Figure B) Into Base (Figure A) by inserting tapered end (B1).
- ③ Place the seat assembly on the Pneumatic Cylinder (Figure B) by inserting the Pneumatic Cylinder Activator (B2) into the opening (C1) of the mechanism (\*Figure C).  
\*Actual Q32 mechanism not shown, opening is similar.
- ④ Apply pressure for a secure fit.

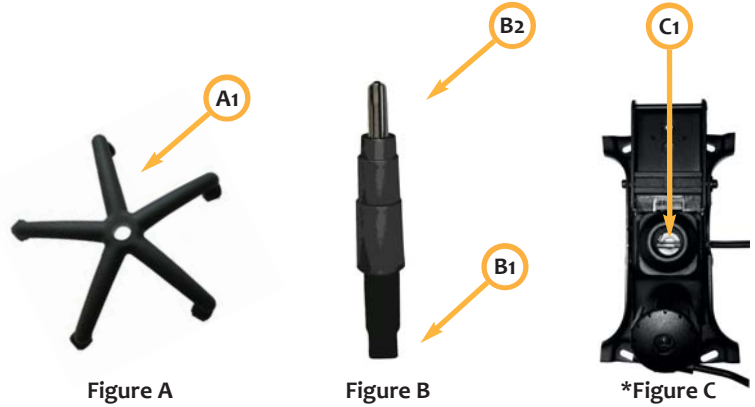

## Step 2

- ⑤ At the completion of step 1, the bottom of the chair assembly should look like figure D.
- ⑥ Lay Seat Assembly on a carpeted floor as shown in Figure F.
- ⑦ Take Backrest (Figure E) and slide Backrest Bar (E1) into slot (F1) until the three holes line up for Allen head screws.
- ⑧ Hand tighten all three Allen head screws (Figure G) before tightening with Allen head key provided.

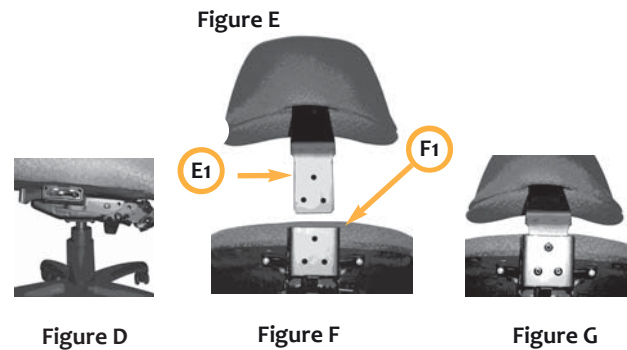

**Ratchet Back** - Lift back all the way up to release ratchet mechanism. Push back all the way down to activate. Lift back up slowly for 7 locking positions. Not available on Grid or Jay Series.