



Disassembly Instructions

Kudl, Hover, and Dock

① Base and Cylinder Disassembly (Kudl only)

The cylinder is press fit into the base assembly. The receiving hole in the base is tapered.

Turn the chair over. Firmly grasp one of the base legs in one hand. Using the steel hammer with the other hand, strike firmly down on the bottom edge (not the middle) of the cylinder that is exposed through the bottom on the base assembly. As you strike down on the edge of the cylinder with the steel hammer, simultaneously pull up on the base away from the cylinder. After a few strikes with the hammer, the base should release from the cylinder.



② The cylinder is press fit into the mechanism. The receiving hole of the mechanism is tapered.

With the chair still in a flipped position, firmly grasp the cylinder in one hand. Using the steel hammer with the other hand, strike firmly down on the mechanism near the area where the cylinder fits into the mechanism. As you strike down on the mechanism with the steel hammer, simultaneously pull up on the cylinder away from the mechanism. After a few strikes with the hammer, the cylinder should release from the mechanism.



③ Remove the foot ring if applicable.

Turn the foot ring until it is loose enough to slide away from the cylinder.



④ The mechanism is mounted to the seat with 4 screws.

Using the phillips head screwdriver, remove the 4 screws.





Disassembly Instructions

Kudl, Hover, and Dock

⑤ Remove Casters (Hover Only)

Remove 4 screws attaching the caster assembly. Remove caster assembly.



⑥ Remove Legs (Dock Only)

Remove the black plastic insert plug from each leg. Look down inside the leg to find an allen bolt. Remove allen bolt with 3/8" allen wrench. Remove leg.



⑦ Remove Seat Screws (Kudl Only)

Remove the (8) 1/4 20x1 screws that attach the seat to the outer frame. Remove the seat from the outer frame.





Disassembly Instructions

Kudl, Hover, and Dock

- ⑧ The upholstery is stapled to the wood substructures. Use the staple puller to remove the staples from the underside of the unit. Remove the black “horsehair” from the bottom of the unit.



- ⑧ The upholstery is glued to the foam cushions. The foam cushions are glued to the wood substructures. Pull the upholstery away from the foam cushions. Pull the foam cushions away from the wood substructures while using the flat head screwdriver or the staple puller to assist the release.





Disassembly Instructions

Kudl, Hover, and Dock

Parts List Kudl:

12 Screws
Staples
2 Substructures
3 Upholstery Pieces
2 Cushions
1 Mechanism
1 Cylinder
1 Base
1 Back Reinforcement
Casters/Glides
If Applicable:
1 Foot Ring
Spacers

Composition:

♻️ Steel
♻️ Steel
Wood
Fabric, Vinyl, or Leather
Foam
♻️ Steel
♻️ Steel
Wood or Plastic
♻️ Steel
Plastic

♻️ Steel
Plastic

Parts List Dock:

4-6 Screws
8-12 Washers
Staples
1 Substructures
2 Upholstery Pieces
2 Cushions
4-6 Legs
4-6 Leg Caps

Composition:

♻️ Steel
♻️ Steel
♻️ Steel
Wood
Fabric, Vinyl, or Leather
Foam
♻️ Steel
Plastic

Parts List Hover:

20 Screws
5 Casters Assembly
Staples
1 Substructure
2 Upholstery Pieces
2 Cushions

Composition:

♻️ Steel
Plastic/Steel
♻️ Steel
Wood
Fabric, Vinyl, or Leather
Foam