




M22 - Manual Back Height

Mechanism Instructions

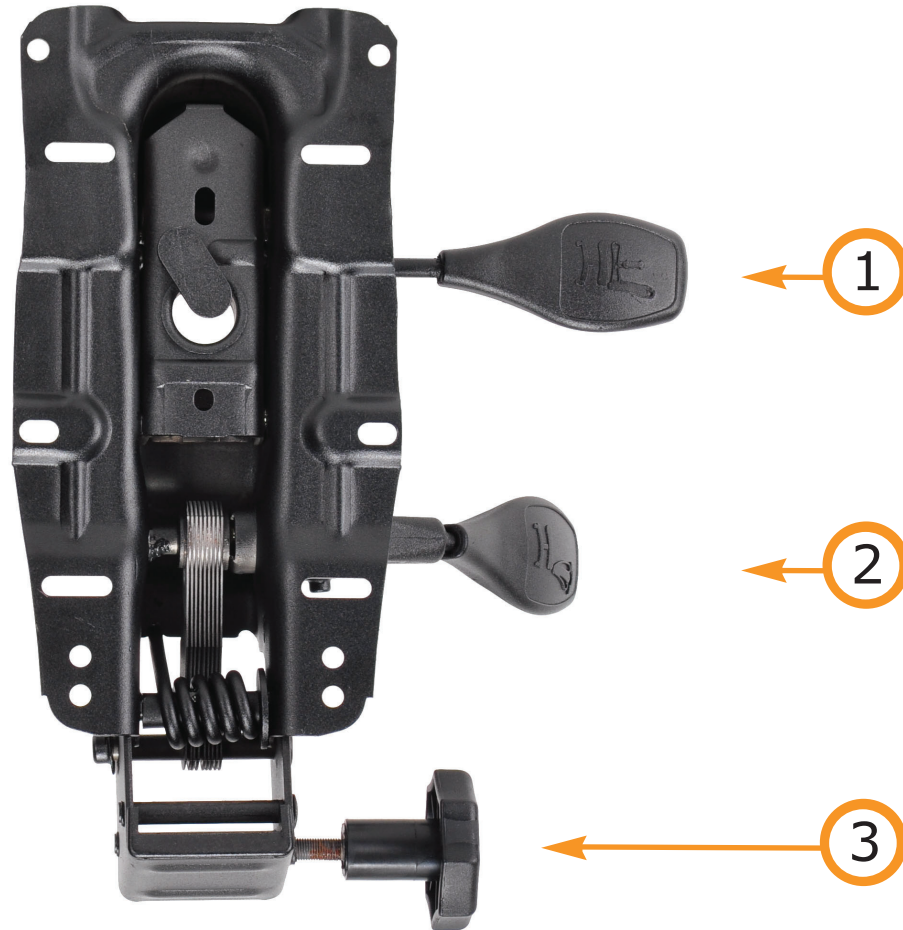

- ① **Pneumatic Lift Adjustment:**
Lift lever towards seat to activate height adjustment.
- ② **Back Angle Adjustment:**
Pull up on lever to make adjustment to back angle.
To lock the backrest in place, press the lever down.
- ③ **Back Height Adjustment:**
Unscrew knob, then adjust back to desired height.
Tighten knob after adjustment.

All adjustments are made while seated.