

E31 - HD Swivel Tilt

Mechanism Instructions



1 Tension Adjustment:

Turn the knob (under mechanism, slightly shown in photo) counter clockwise to increase the tension for more resistance, turn knob clockwise to decrease the tension for less resistance.

2 Pneumatic Lift Adjustment:

Lift lever towards seat to activate height adjustment.

3 Tilt Lock Adjusment:

To engage upright tilt lock, push the lever toward the mechanism. To disengage, pull lever away from the mechanism.

All adjustments are made while seated.





