




# Q24 - Weight Activated Synchro

## Mechanism Instructions

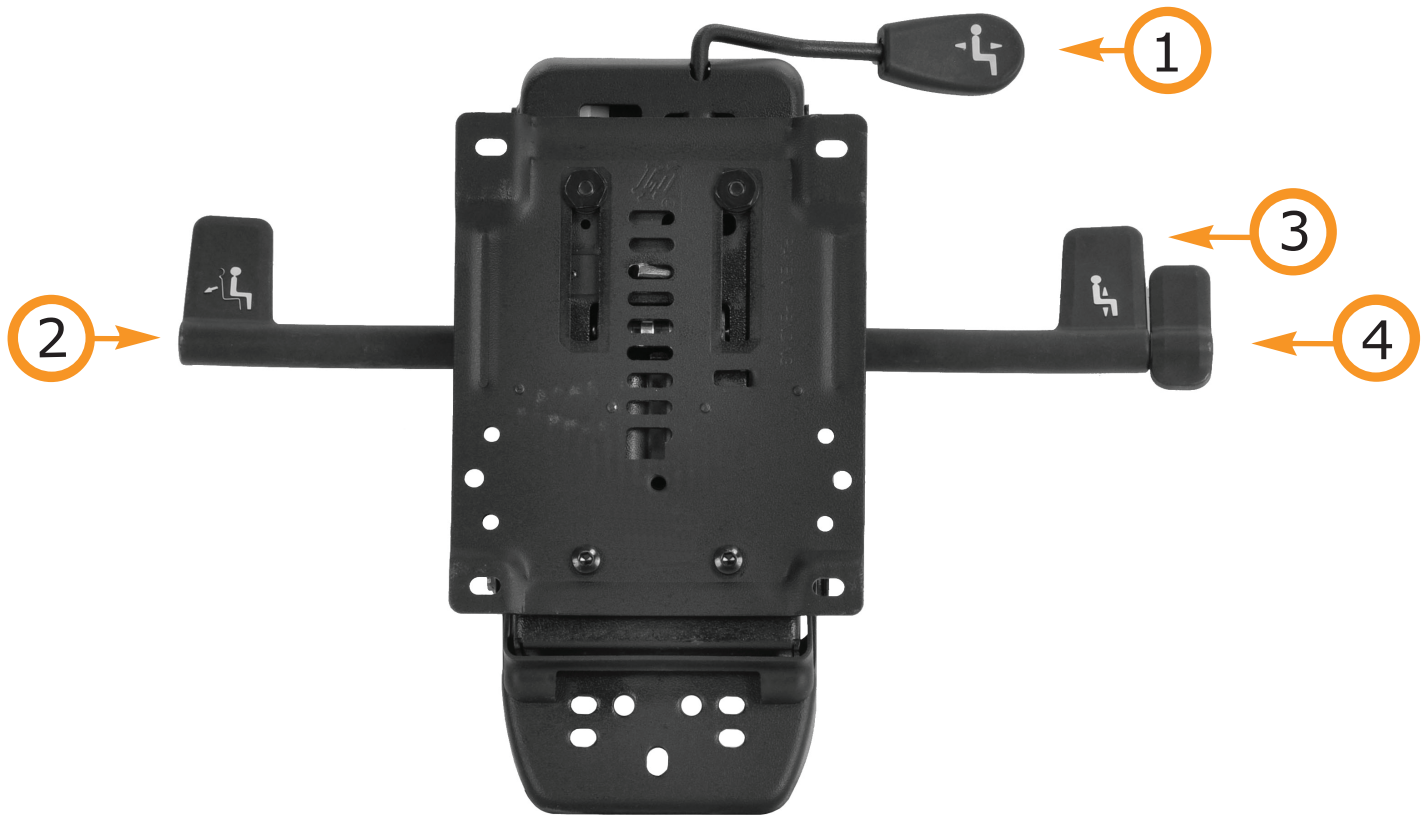

- ① **Adjustable Seat Depth:**  
Lift lever up to allow for adjustment of seat forward & back. To lock seat in desired position, push lever back down.
- ② **Synchro Tilt Limiter Adjustment:**  
Push lever down one click to release lock.  
First position (UP): Locked  
Second position (MIDDLE): 12° Tilt  
Third position (BOTTOM): 20° Tilt
- ③ **Pneumatic Lift Adjustment:**  
Lift tab up to adjust seat height.
- ④ **Tension Adjustment (2-position):**  
Rotate tab (145° clockwise rotation) for lighter tension.

All adjustments are made while seated.