

Q38 - HD Multi Function

Mechanism Instructions



1 Tension Adjustment:

Turn the knob (under mechanism, not shown in photo) counter clockwise to increase the tension for more resistance, turn knob clockwise to decrease the tension for less resistance.

2 Infinite Forward Tilt:

Turn lever clockwise to lower the front edge of the seat. To raise the front edge of seat, tilt seat back with lever #3 until seat locks, then rotate lever counter clockwise.

3 Seat Tilt:

This paddle adjusts seat and backrest angle as a unit and allows chair to free float. Lift paddle to allow chair to free float. Push paddle down to lock the chair in any desired position.

Pneumatic Lift Adjustment: Lift tab up to adjust seat height.

5 Back Rest Angle Adjustment:

Pull up on the tab to make adjustments to back rest angle or to allow the back rest to move with your body. Push paddle down to lock. All adjustments are made while seated.





