


# Mechanism Instructions - Q36

## Seating Inc.

P.O. Box 898 ♦ 60 State Street ♦ Nunda, NY 14517 ♦ Tel: 800-468-2475 ♦ seatinginc.com

**Tilt Resistance** - (There is a hand wheel under the front of the mechanism that can't be seen in this picture) Turn the Hand Wheel counter clockwise to increase the tension for heavier people, clockwise to decrease the tension for lighter people.

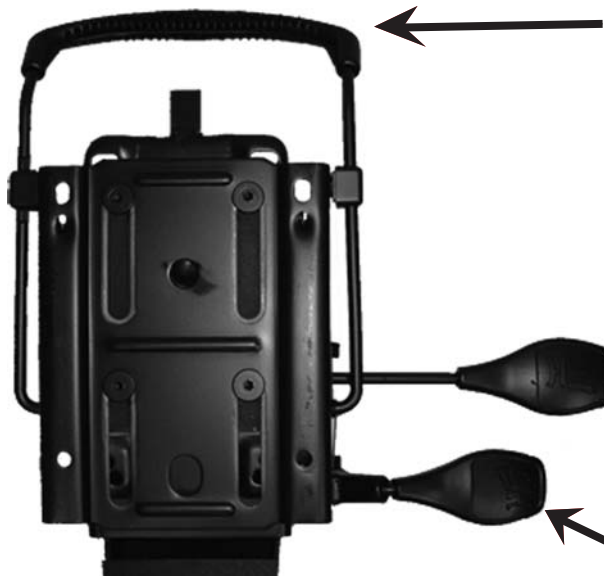

### Adjustable Seat Depth

Lift & hold the bar up towards the seat to allow for a 2" adjustable seat slide. By holding the bar up, it unlocks seat slide & allow for the seat pan to slide forward or backwards.

**WARNING** - Smaller users must set the seat depth all the way back, to avoid perching on the front of the seat, and tipping the chair forward.


### Pneumatic Lift Adjustment

Lift tab up to adjust seat height.

### Seat Tilt

This paddle adjusts seat and backrest angle as a unit and allows chair to rock. Lift paddle to allow chair to "rock". Push paddle down to lock the chair in any desired position.

## Q36 Heavy Duty 2:1 Synchro Tilt With Adjustable Seat Depth

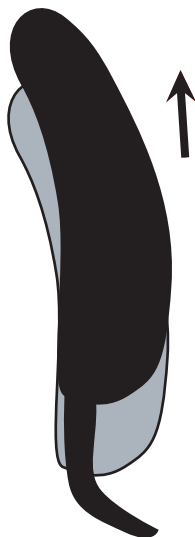

### Quick Set Back Height Adjustment

#### Step 1

##### Release Back Height

While sitting in the chair put both hands behind you under the back cushion of the chair. Pull the back cushion up to it's highest possible position - then let go and allow it to drop all the way down. Push gently down on the cushion to make sure it is has returned all the way to the bottom.

#### Step 2

##### Back Height Adjustment

While sitting in the chair put both hands behind you under the back cushion of the chair and pull up slowly until you hear the mechanism click. Let go and test the back height. Repeat the procedure until it has reached the desired height.