




# Q28 Mechanism Instructions

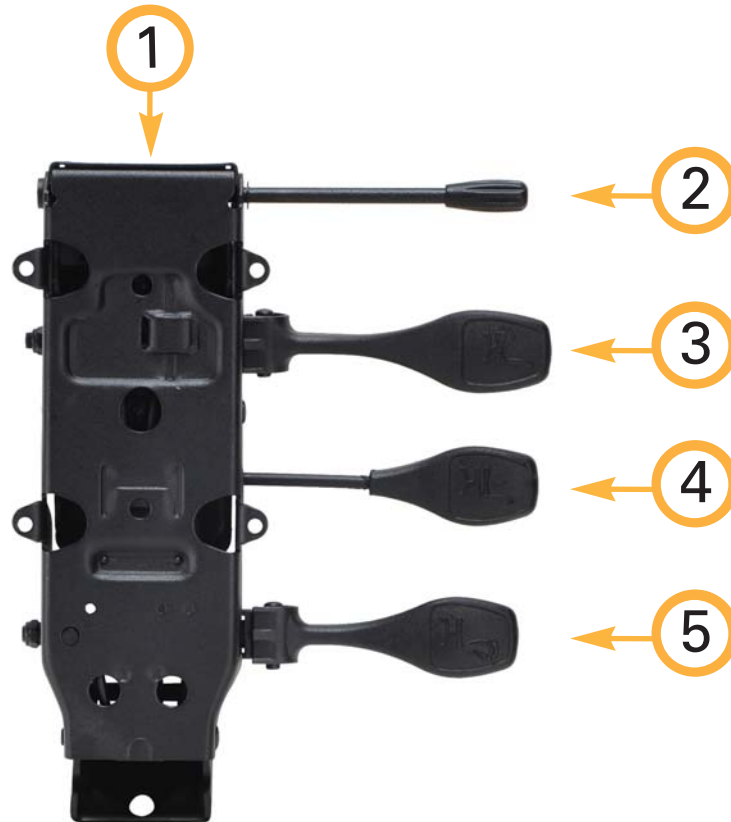

- ① **Tension Adjustment:**  
Turn the knob (under mechanism, not shown in photo) counter clockwise to increase the tension for more resistance, turn knob clockwise to decrease the tension for less resistance.
- ② **Infinite Forward Tilt:**  
Turn lever towards front of chair to lower front edge of seat.  
Rotate lever rearward to raise front edge of seat
- ③ **Seat Tilt:**  
This paddle adjusts seat and backrest angle as a unit and allows chair to free float. Lift paddle to allow chair to free float.  
Push paddle down to lock the chair in any desired position.
- ④ **Pneumatic Lift Adjustment:**  
Lift tab up to adjust seat height
- ⑤ **Back Rest Angle Adjustment:**  
Pull up on the tab to make adjustments to back rest angle or to allow the back rest to move with your body. Push paddle down to lock.