




M22 Mechanism Instructions

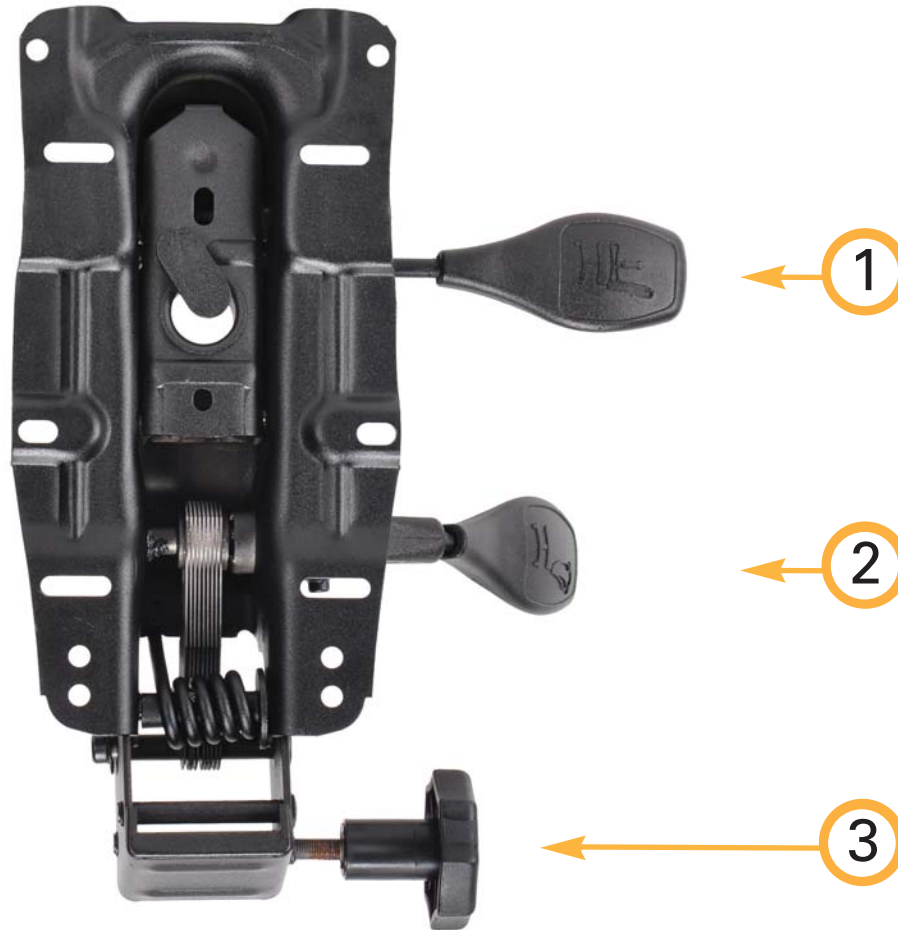

- ① **Pneumatic Lift Adjustment:**
Lift lever towards seat to activate height adjustment.
- ② **Back Angle Adjustment:**
Pull up on lever to make adjustment to back angle.
To lock the backrest in place, press the lever down
- ③ **Back Height Adjustment:**
Unscrew knob, then adjust back to desired height.
Tighten knob after adjustment.


All adjustments are made while seated.



M22 Assembly Instructions

Step 1

- ① Place Base and Caster Assembly (Figure A) on carpeted floor.
- ② Insert Pneumatic Cylinder (Figure B) Into Base (Figure A1) by inserting tapered end (B1).
- ③ Place the seat assembly on the Pneumatic Cylinder (Figure B) by inserting the Pneumatic Cylinder Activator (B2) into the opening (C1) of the mechanism (*Figure C).
*Actual M22 mechanism not shown, opening is similar.
- ④ Apply pressure for a secure fit.

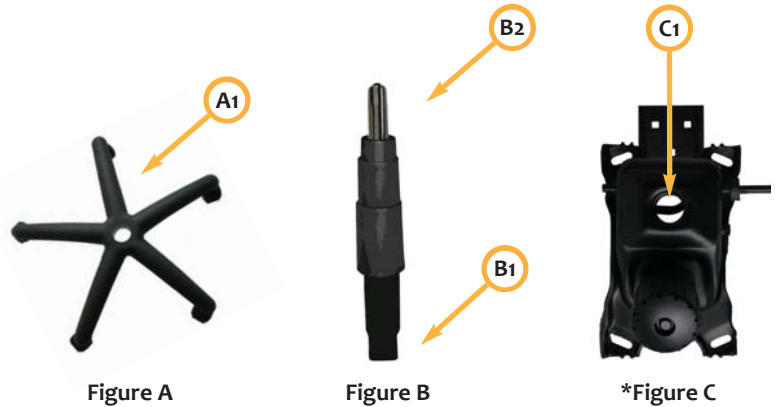

Step 2

- ⑤ Attach Handwheel (D1) by inserting into mechanism (D2).
- ⑥ Slide Backbar (D3) into Mechanism (D2).
- ⑦ Insert plug into backbar to hold into place (E1).
- ⑧ Adjust back height by moving backbar up and down in mechanism. tighten handwheel at desired height (Figure F).

